

WILSONWERKS ARCHIVES

This camera manual is for reference and historical purposes, all rights reserved.

This cover page is copyrighted material. This document may not be sold or distributed without the express consent of the publisher.

©2008 wilsonwerks Llc

HOW TO OPERATE YOUR NEW

Bell & Howell



REMOTE CONTROL

FOR THE UTMOST CONVENIENCE IN OPERATING YOUR PROJECTOR, FOLLOW THESE
SIMPLE INSTRUCTIONS FOR YOUR NEW

Bell & Howell SYNCHRONIZED REMOTE CONTROL

The new synchronized Remote Control supplied with your movie outfit puts you in complete command of your projector from an easy-chair, or from anywhere in the room. Here's all there is to putting on a show with your new Remote Control . . .

1 □ Set up your projector and screen as described in the accompanying instruction booklet.

2 □ Plug the end of the Remote Control cord with the two prongs into a wall outlet.

3 □ Plug the line cord of the projector into the receptacle marked "Projector".

4 □ Plug the cord of a bridge or table lamp into the receptacle marked "Room Lamp". This will provide light in the room for threading your projector (see instruction booklet). Important: Make certain the total wattage of the room lamp does not exceed 450 watts.

5 □ Once your projector is threaded with film, move the control switch of the projector to "Lamp".

6 □ To start your show, merely press the "Run" cycle button on the Remote Control. This will start the projector and automatically turn off the room light.

7 □ After the show is over, or if you want to stop for a break in the middle of a reel, simply press the "OFF" cycle button on the Remote Control. This will turn off the projector and turn the room light on automatically.



You'll enjoy the fun, convenience and versatility your new synchronized Remote Control delivers each and every time you put on a show.

Bell & Howell

finer products through imagination

7100 McCormick Road, Chicago 45, Illinois