


WILSONWERKS ARCHIVES

This camera manual is for reference and historical purposes, all rights reserved.

This cover page is copyrighted material. This document may not be sold or distributed without the express consent of the publisher.

©2008 wilsonwerks Llc

GRAFLEX EXECUTIVE
&
GRAFLEX TRAVELER

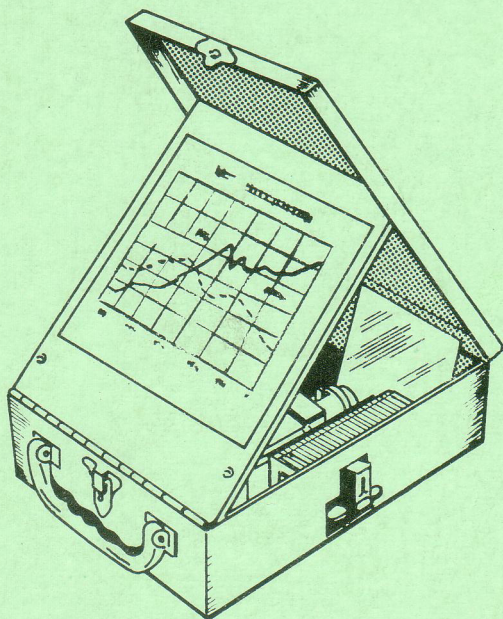

REAR SCREEN PROJECTOR

OPERATING INSTRUCTIONS

GRAFLEX TRAVELER

OPENING

Release catch near handle, lift cover and move back as far as it will go. Lift screen frame and move it all of the way forward. Pull power cord out of storage area behind lamphouse and plug into 117 volt outlet AC or DC. ON-OFF switch is located under lower left corner of screen.

The slide changer will accept up to 24 slides in cardboard readymounts, only. Orient slides for proper viewing or reading, left to right. Slide the spring tensioned carrier toward the back, invert the slides and insert into carrier.

Move cover forward, while moving screen frame back. Hook screen frame onto metal bracket inside of cover. (See drawing).

OPERATING

Push changer handle all the way in and slide #1 will appear on screen. To change slides, pull handle all the way out, push all the way in.

Focusing: Move red focus knob until picture is in sharp focus.

Storage: Two sets of 24 slides can be carried in container in left rear of case. Press in on side clip to release holding latch and swing hinged container down.

GRAFLEX EXECUTIVE

OPENING

Release catch near handle, lift cover and move back as far as it will go. Lift screen frame and move it all of the way forward. Remove Airequipt Magazine from left rear corner of case by pressing in on side clip to release holding clamp. Pull power cord out of storage area behind lamphouse and plug into 117 volt outlet AC or DC. ON-OFF switch is located under lower left corner of screen.

Hinged member on base can be used as rear elevating foot.

Insert magazine into slide changer by pulling colored handle at right side of case all the way out and slide magazine into changer from position nearest to mirror (name AIREQUIPT must face the colored handle). Push magazine until #1 on the index card registers with notch in center of the top of the slide changer. (Caution: Be sure to insert magazine so that it slides UNDER THE TOP EDGE OF THE SLIDE CHANGER.) Slide #1 is now ready to be projected.

Move cover forward, while moving screen frame back. Hook screen frame onto metal bracket inside of cover. (See cover drawing).

Push colored handle all the way in and slide #1 will appear on screen.

OPERATING

Focusing: Move red focus knob until picture is in sharp focus.

Operating Slide Changer: Pull colored handle all the way out and then push in to change slides. After the last slide (#36) has been shown, the handle cannot be pushed in. Move the magazine all of the way back, (toward the mirror) and lift out.

AIREQUIPT SLIDE MAGAZINE

The 36 METAL SLIDE FRAMES of the magazine accept all cardboard readymounts and those very thin plastic or metal mounts not more than 3/32" thick. (See paragraph on Glass Bound Slides)

Loading Magazine: Place magazine on table with name AIREQUIPT down. Put slides in order and orient each properly for normal reading, or viewing, left to right. Leaving slide frames in magazine, load by turning the bottom of each slide 90 degrees to the right, towards the index card, and starting at the No. 1 end of the magazine, insert slides into frames. Be sure to push slides into the frames until they are seated behind the "lip" of the metal frame. If the metal slide frames are removed from the magazine, they must be reinserted so that the small pocket of frame appears at bottom of the magazine aperture under the name AIREQUIPT.

Damaged Slide Frames: A slide frame which has become damaged or placed incorrectly in a magazine will not return all the way into the magazine.

To remove a damaged slide frame, remove the complete changer unit. Push colored handle all the way in, remove knob, washer, and cover holding changer in place. Lift out complete changer by pulling up on end of slide track which extends through projector frame. Push changer handle all the way in, so that troublesome frame is in projection position. Hold the slide frame immovable. Pull the changer handle all the way out, remove magazine, release and remove slide frame.

GLASS BOUND SLIDES

The magazine will accept cardboard mounts with glass aperture like the Graflex Slide Binder, or cover glass "sandwiches" made by removing the transparency from the cardboard ready-mount and placing in a Kodak or other standard paper mask, which is then placed between two pieces of AIREQUIPT cover glass and inserted into metal frame of magazine. Some very thin plastic or metal mounts with thin glass may also be accepted, but once installed into the frame, will be very difficult to remove.

CARRYING MAGAZINES

Store magazine at the left back corner of case and hold in place by hinged latch. If necessary, one magazine can be left in the changer, pulled all the way forward, and another can be left with the changing bar pushed in at the #36 slide position. (Caution: do not leave magazine with glass slides in this position because of their excessive weight.

MAINTENANCE

Projection Lamp: To change projection lamp, remove the two screws of lamp housing cover, exposing both the lamp and the condensing lenses. Press in on end of bayonet lamp, through hole in side of lamphouse, and twist to remove. Replace with 75 watt CBX (Radiant, GE) Double Contact projection lamp. While the cover is off, condenser lenses may be lifted out - one at a time - for cleaning.

Cleaning: Keep finger marks from underside of viewing screen and from all other optical surfaces.

If cleaning of condenser lenses and viewing screen is necessary, use only a soft cloth or a chamois dampened with lens cleaner or a mild detergent solution. When cleaning mirror, use water only as front reflecting surface is easily damaged.

MAINTENANCE

Projection Lamp: To change projection lamp, remove two screws of lamp housing cover, exposing both the lamp and the condensing lenses. Press in on end of bayonet lamp through hole in side of lamp house, and twist to remove. Replace with 75 watt CBX (Radiant, GE) Double Contact projection lamp. While the cover is off, condenser lenses may be lifted out - one at a time - for cleaning.

Cleaning: Keep finger marks from underside of viewing screen and from all other optical surfaces.

If cleaning of condenser lenses and viewing screen is necessary, use only a soft or a chamois dampened with lens cleaner or a mild detergent solution. When cleaning mirror, use water only as front reflecting surface is easily damaged.

YOUR GRAFLEX WARRANTY:

To the initial retail purchaser of Graflex merchandise:

Skilled craftsmen have produced the Graflex merchandise you have purchased. They have built into it a level of quality and performance which will insure your enjoyment of its use.

Graflex merchandise is warranted by Graflex and the Graflex Dealer from whom you purchased the same, to be free from faulty materials and workmanship, except as hereinafter set forth. If any time during your first year of ownership, (90 days in the case of any electronic components and parts, including without limitation, tubes and projection lamps), any servicing is necessitated by faulty material or workmanship, it will be provided (or the equipment replaced at our option) without charge except for transportation charges by your nearest Graflex Service facility. Returns for servicing should be made through your Graflex Dealer; or if this is not convenient, the merchandise should be carefully packed in a stiff container with adequate packing (not excelsior). Attach name and address and any *specific instructions* to the package, which should be adequately secured and fully insured.

THIS WARRANTY IS NOT APPLICABLE:

- A. To Graflex merchandise which in our judgment has been damaged, abused, or requires replacement of parts due to wear and tear from use, or for any reason other than faulty materials and workmanship. Such merchandise will be serviced at factory-established rates.
- B. To Graflex merchandise which has been tampered with or serviced by persons other than Graflex approved personnel.
- C. If adaptations or accessories of other than Graflex recommendations have been made or attached.
- D. Where the Graflex merchandise bears serial numbers, if it has not been registered with Graflex by means of the attached registration card or appropriate substitute within 60 days from date of purchase.

No liability is assumed for film which is damaged or is unsatisfactory for any reason (due to equipment malfunction or otherwise), nor is Graflex, Inc., obligated to replace such film.

EXCEPT AS EXPRESSLY SET FORTH HEREIN NO OTHER WARRANTIES ARE MADE BY GRAFLEX OR YOUR GRAFLEX DEALER WITH RESPECT TO GRAFLEX MERCHANDISE, INCLUDING, WITHOUT LIMITATION, WARRANTIES AS TO FITNESS FOR A PARTICULAR PURPOSE AND OF MERCHANTABILITY. No liability is assumed for expenses or damages resulting from interruptions in operation of equipment, nor for incidental or consequential damages of any nature.

In order that we may be able to pursue our continuing program of product improvement, Graflex reserves the right to make changes in design, or add improvements to any product without incurring any obligation to include such revisions in equipment previously produced.

The warranties hereinbefore expressly set forth are made only to the *original retail purchaser*. Graflex's liability under the within warranty is limited to repair or replacement as hereinbefore provided.

SERVICE FACILITIES:

Graflex Approved Service Stations are conveniently located in all major cities. Contact your Graflex Dealer or write to the Manager, Graflex Service Sales, for the address of the Graflex Approved Service Station nearest you.

Record below such serial numbers as your equipment bears for your insurance file and future reference.

GRAFLEX, INC., Rochester, N. Y. 14603

SERVICE DEPARTMENTS

HOME OFFICE:

3750 Monroe Avenue
Rochester, New York 14603

WESTERN REGION:

800 North Cole Avenue
Hollywood, California 90038

MIDWEST REGION:

8220 North Austin Avenue
Morton Grove, Illinois 60053

EASTERN REGION:

411 Sette Drive
Paramus, New Jersey 07652

GRAFLEX OF CANADA LIMITED:

550 Hopewell Avenue
Toronto, Ontario, Canada

SINGER

GRAFLEX, INC.

GRAFLEX, Inc.
Rochester, New York
14603, U. S. A.

A Subsidiary of
The Singer Company