WILSONWERKS ARCHIVES

This camera manual is for reference and historical purposes, all rights reserved.

This cover page is copyrighted material. This document may not be sold or distributed without the express consent of the publisher.

©2008 wilsonwerks Llc

INSTRUCTIONS

for using the

Keystone Viewer



8-MILLIMETER

for

MODELS K-109 K-108 K-66 K-68



Keystone Camera Co., Inc.

Hallet Square, Boston 24, Mass., U.S.A.

HOW TO ATTACH AND USE YOUR KEYSTONE 8 MM VIEWER

1. Pull out Pilot Light Cover.

FILM PUNCH

2. Insert Viewer with Film Punch pointing directly to your left (as shown in Fig. 1.)



3. Thread your Projector in the normal manner (see Page 8 of your Instruction Book) leaving the lower loop much longer than usual (as shown in Fig. 2).



Fig. 2

4. Using both hands (as shown in Fig. 3) with Film under roller, insert Film under Film Punch and Film Guide Plate. Seat in Aperture Track (as shown in Fig. 4). The threaded Projector and Viewer should look like Fig. 2 with a very large lower loop. (It is important to have a large lower loop in order to feed your Film through the Viewer.)

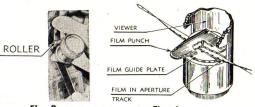 


Fig. 3

Fig. 4

5. Operate your Projector in the normal manner (see page 7 of your Instruction Book). From your screen select the portion of your Film you wish to cut out. When you have made your selection stop the Projector. Feed your Film through the Viewer by hand until you come to the First Frame of the Film you wish to cut out. The Viewer will magnify the Frame.

Push down the Film Punch (Fig. 4). It will make a punch mark on Film (as shown in Fig. 5). Continue feeding your film by hand through Viewer until you come to Last Frame of the Film you wish to cut out. Punch this Frame in the same manner as the First Frame.

Using both hands remove Film from your Viewer (as shown in Fig. 3). Lift Film and slide over Aperture Track (as shown in Fig. 4).

Film is now ready to cut out and splice by removing portion between punched marks.

