

# WILSONWERKS ARCHIVES

This camera manual is for reference and historical purposes, all rights reserved.

This cover page is copyrighted material. This document may not be sold or distributed without the express consent of the publisher.

©2008 wilsonwerks Llc

Instructions for attaching and interchanging lens mount adapters for:


CANON  
EXAKTA  
KONICA  
MINOLTA

MIRANDA  
NIKON  
NIKKORMAT


PENTAX/PRAKTICA  
PETRI  
TOPCON

**NOTE:** For meter coupling on Nikon, Topcon, Minolta SRT and Miranda Sensorex see instructions on reverse side before proceeding with installation of lens adapter.


**Fig. 1.**

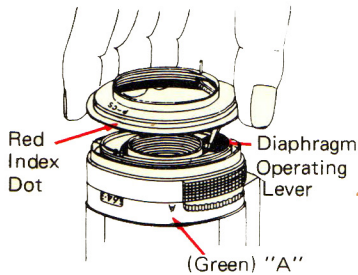

**Fig. 2.**

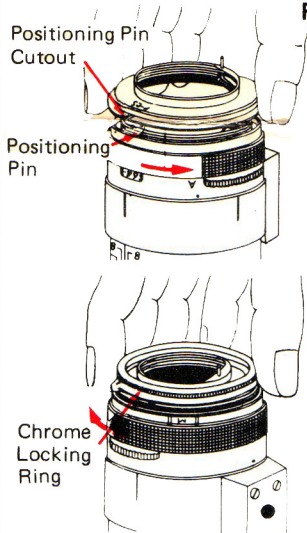

**Fig. 3.**

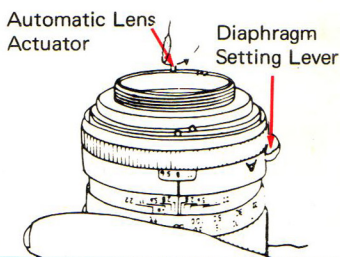

**ATTACHING LENS ADAPTER**

1. Set diaphragm selector switch on automatic (green "A" will be visible). Unscrew protective plastic cap from rear of lens. Remove adapter from protective plastic case by:
  - a) Removing rear lens cap
  - b) Unscrewing locking ring in counter-clockwise direction.
2. Place lens on table (or convenient flat surface) with rear of lens up.
3. Holding lens with your left hand, and adapter in right hand, align the red index dot on rear of lens barrel with the red index dot on the rim of adapter. On Minolta SRT, Canon, Exakta and Topcon the red dot is on the rear of adapter near the identifying letters (TO-CAF-EX or SRT) Fit adapter to lens, being careful not to force or bend diaphragm operating lever on adapter when you insert it into the lens barrel.

**For Minolta SRT 101, Topcon D-1, and Super D, raise adapter slightly and align flange on meter coupling band with claw on side of adapter. (If these are not properly aligned, rotate either flange or claw while holding adapter and lens in position). See Figure 4, page 2.**

4. Push down lightly on adapter and turn it counter-clockwise (about 1/4") until you hear and feel the positioning pin engage the cut-out on the adapter rim.
5. Before securing adapter, check for proper diaphragm action by setting lens to its smallest opening (F/16, or F/22) and with mode selection in auto, operate the diaphragm pin or lever a few times. Lens diaphragm should open and close down to minimum aperture each time. If not, remove adapter and re-install as above.
6. Secure adapter to lens by screwing chrome locking ring clockwise until hand tight. (Note: With some adapters, the locking ring is a separate component and must be slipped on over rear of adapter. With other adapter models it is an integral piece and cannot be removed). Be sure to hold adapter in correct position on lens when securing locking ring.
7. Again check for proper diaphragm operation as in step 5. Lens may now be installed on your camera in the usual manner.

**SCOPUS, INC.**



25-20 Brooklyn-Queens Expressway W, Woodside, New York 11377

Specifications subject to change without notice.

